



## **BB5 BY DEJAN UNLOCK PROCEDURE**

### **SHORT Instructions:**

1. Connect DKU-5 or normal COM cable to computer
2. Set proper COM cable (must be, between 1 and 9)
3. Download unlocker, run `install.bat`
4. Open file c:/bb5\_unlocker/logs/bb5\_unlocker.cfg and write here proper COM port (1-9)
5. Run c:/bb5\_unlocker/BB5logunlocker.exe
6. Click READ PHONE
7. Click MAKE LOG, log will be created
8. Enter codes to phone (in /psw/ dir), or
9. Click SP UNLOCK to enter codes via FBUS

### **EXTENDED INSTRUCTIONS:**

\*\*\*\*\* CONECTION \*\*\*\*\*

For this program you need Fbus cable like DK5, CA43 or similar conected to ports from COM1 to COM9.

First unpack zip fiole and strat install.bat

In file "c:\bb5\_unlocker\logs\bb5\_unlocker.cfg" with any text editor change your COM port setings!

\*\*\*\*\* USING \*\*\*\*\*

Program can be started successfully only if is COM port in file "c:\bb5\_unlocker\logs\bb5\_unlocker.cfg" adjusted properly.

READ PHONE:

\*\*\*\*\*

Reading info data from phone and making BACKUP file for that phone( Field 308,1).

IMPORTANT DO NOT delete or modify that file because can save your \*\*\* if something goes wrong.

#### WR BACKUP:

\*\*\*\*\*

With that function can write backup file with Field 308,1 if exist in BACKUP folder.

#### MAKE LOG:

\*\*\*\*\*

Function for making log file . With that log file BB5\_calc.exe calculating codes for unlock.  
Working with BB5 phones with RAP3G v.2.x (6630,6680,6681,6682,n70,n90).  
IMPORTANT phone must be without Sim card.

#### SP UNLOCK:

\*\*\*\*\*


Making unlock with codes calculated by BB5\_calc.exe.

#### SP UNLOCK PROCEDURE

Connect cable to PC and be shure com port is adjusted properly  
Start BB5logunlocker.exe  
Connect phone and switch on without Sim card.  
press button READ PHONE and wait until get the message DONE.  
If is everything correct you will see info from phone on screen.  
Pres button make log and wait until get mesage done.  
Log file is in folder LOGS.  
Start BB5\_calc.exe to make for you PSW file in folder PSW  
Press button SP UNLOCK and unlock your phone.

That is all folks

If you got unlock codes from your provider and you used all yours 3 attempts to enter code via keypad then do the following:  
into dir "c:\bb5\_unlocker\psw" create a file "aaaaaaaaaaaaa\_BB5.psw" where is "aaaaaaaaaaaaa" enter your phones imei  
then in that created file enter in the files start "#pw+bbbbbbbbbbbbbb+c#" where is "bbbbbbbbbbbbbb"  
enter your unlock code and where is "c" enter your logs level number (1-7).  
save the file and use "SP UNLOCK" function

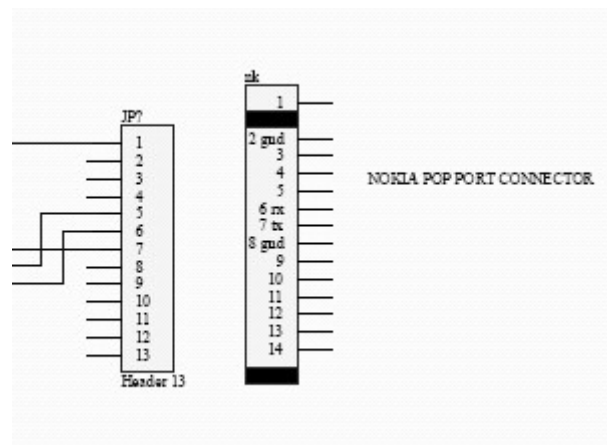

**BBS Unlocker by logs v1.0b by Dejan Kaljevic (c) 2006**

Phone ID: V 04wk47\_m\_v14 09-02-06 RM-36 (c) Nokia  
 IMEI: 35761700 COM8:

SP Ver: SIMLOCK SERVER VERSION 56 - Increased  
 SP\_F: 0000000000000000 SP\_P: 0010100000000000  
 SP Lock Status: NOT Locked!

DONE.

eMail: [dejan@net.yu](mailto:dejan@net.yu)  
 Web: <http://users.net.yu/~dejan>